

# INSTALLATION

. . . .

## **TRANSMISSION SHROUD for '09-UP TOURING**

6950

### THANK YOU FOR CHOOSING KÜRYAKYN!

PROTECT YOURSELF AND OTHERS FROM POSSIBLE INJURY AND PROPERTY DAMAGE OR LOSS. PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS, AND NOTICES REGARDING THE INSTALLATION, USE, AND CARE OF THIS PRODUCT.

**WARNING** 

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

**▲** CAUTION

This indication alerts you to the fact that ignoring the contents described herein can result in minor or moderate potential injury.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

#### MAKE SURE THE FOLLOWING PARTS HAVE BEEN INCLUDED IN THE KIT:

- 1 Front Transmission Shroud **Not used with OEM head pipes**
- 1 Rear Transmission Shroud
- 1 Hardware Kit containing:
  - 1 10-24 X 3/8" Button Socket Head Screw **Not used in some situations**
  - 2 Spacers
- 2 Chrome Hot Spots
- 1 Installation Instructions

#### **TOOLS SUGGESTED:**

Set of hex sockets and ratchet, set of hex wrenches, ft lbs + in lbs torque wrenches

NOTICE

These installation instructions contain important information. Ensure that the end user receives this copy and is aware of its importance for future reference.

PIC 1

LOOSEN THE

REMOVE THE

SOCKET HEAD SCREW

FRONT SCREW

STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Allow the engine and exhaust system to cool.



INSTALLATION REQUIRES CONTACT WITH THE EX-HAUST SYSTEM. ENSURE THAT THE EXHAUST SYSTEM HAS FULLY COOLED BEFORE BEGINNING TO PREVENT IN-JURY.

# FRONT SHROUD PROCEDURE: DO NOT INSTALL FRONT SHROUD IF YOU HAVE OEM HEAD PIPES!

STEP 2 Refer to PIC 1. Loosen the front transmission top-

cover screw until there is about an 1/8" gap between the washer and cover.

6950-21HD-0814

3" gap between the washer and cover.

FRONT OF BIKE

### **CUSTOMER SERVICE**

877.370.3604 (toll free)

#### **INSTALLATION QUESTIONS**

techsupport@kuryakyn.com or call 715.247.2983

#### LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
  - The product must be properly installed, maintained and operated under normal conditions.
  - Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breech of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- •Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- •Küryakyn makes no warranty of any kind in regard to other manufacturer¹s products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

#### **ABOUT OUR CATALOG**

For purchasing Küryakyn® products, you can receive a complete catalog free of charge.
Send the Proof-of-Purchase below with your address to: Küryakyn 454 County Road V V

Somerset, WI 54025-9031
Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.



STEP 3 Remove the transmission bearing housing screw shown in PIC 1 on PAGE 1; place one of the included Spacers over the screw as shown in PIC 2; set it within arms reach of the work area.

**STEP 4** Refer to **PIC 3**. Locate the Front Transmission Shroud; slide the top notch between the washer and top of the transmission cover.

STEP 5 Refer to PIC 4. Secure the Front Shroud with the socket head screw with Spacer; leave the screw loose for now.

Snug the transmission top-cover screw for now.

## **REAR SHROUD PROCEDURE:**

STEP 6 Remove the transmission bearing housing screw shown in PIC 4. Place the other included Spacer over the screw as before and set it within arms reach of the work area.

Refer to **PIC 4**. Loosen the rear transmission top-cover screw until there is about an 1/8" gap between the washer and cover.

**STEP 7** Refer to **PIC 5**. Locate the Rear Transmission Shroud; slide the top notch between the washer and top of the transmission cover.

Align the Rear Shroud with the Front Shroud.

Secure the Rear Shroud with the socket head screw and Spacer; leave the screw loose for now.

STEP 8 IF FRONT SHOUD IS INSTALLED: Locate the included 10-24 X 3/8" Button Socket Head Screw.

Secure the Rear Shroud to the Front Shroud with the screw; leave it loose for now.

**STEP 9** Ensure that the seams are aligned, then tighten all of the screws.

Torque the transmission bearing housing screws to 22-25 ft lbs (29.8-33.9 Nm).

Torque the transmission top cover screws to 90-120 in lbs (9.5-14.9 Nm).

Do not torque the included 10-24 screw; ensure that it is tight.


**STEP 10** Press the included Hot Spots into the two transmission top-cover screws.


# NOTICE

It is the end user's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Kuryakyn will not provide warranty coverage on products or components lost or damaged due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.



Küryakyn

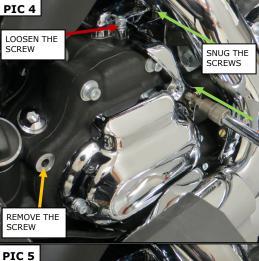

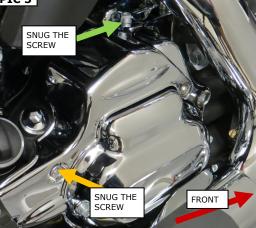

**PAGE** 

2

Ride On!