

# PHANTOM AXLE COVERS

## PARTS INCLUDED

2

2

4

2

1

- Phantom Axle Covers
  - Hardware Kit Including: 2
    - 1/4"-20 x 7/8" Hex Head Cap Screws-HHCS
    - Mounting Tab Clamps with 1/4" Hole
    - 1/4" I.D. Internal Tooth Lock Washers
    - #10/32 x 1/2" Button Socket Cap Screws-BSCS
    - #10 Wave Washers
    - 4 2 "L" Brackets

Installation Instructions 1

Please read and understand entire instructions before starting installation.

## THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL **INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE** AND CARE OF THIS PRODUCT.



#### IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, NOTICE PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE **INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF** THE IMPORTANT INFORMATION CONTAINED IN THEM.

### **TOOLS SUGGESTED**

Set of Hex Wrenches, Set of Combination Wrenches

### STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

NOTE: Check to be certain there is clearance between the Phantom covers and saddlebags and/or the OEM "Shotgun" style pipes. These items may require spacing if adequate clearance does not exist.

## YOU WILL BE WORKING AROUND THE ENGINE AND A WARNING EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

STEP 2 Temporarily remove any accessories that obscure the axle and adjuster area, such as saddlebags.

# INSTALLATION

8200

**CUSTOMER SERVICE** 877.370.3604 (toll free)

### **INSTALLATION QUESTIONS**

techsupport@kuryakyn.com or call 715.247.2983

### LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

 Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).

> •The product must be properly installed, maintained and operated under normal conditions.

•Kürvakvn makes no warranty, expressed or implied, with respect to any gold plated products.

•Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breech of contract or duty between Kürvakvn and a customer.

•Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.

•Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kürvakvn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to: control modules, wiring, chrome & other components.

•Küryakyn makes no warranty of any kind in regard to other manufacturer1s products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### **ABOUT OUR CATALOG**

For purchasing Küryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Küryakyn, P.O. Box 339, Somerset, WI 54025.

Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.


Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.



kuryakyn.con

# Küryakyn

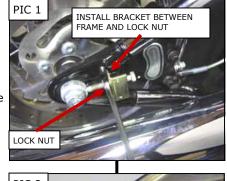





- **STEP 3** Using a combination wrench, loosen the **LOCK NUT** only on the axle adjuster. **DO NOT** loosen the axle adjuster itself. PIC 1
- **STEP 4** On each side of the motorcycle, insert the "L" bracket between the locknut and the swing arm as shown in PIC 1. Tighten the locknut securely clamping the "L" bracket into place.
- **STEP 5** Install the small tab clamp to the rear of each cover as shown (PIC 2)— loosely for now. Use the 1/4"-20 x 7/8" hex fasteners and 1/4" I.D. internal tooth star washers.
- **STEP 6** "Hook" the rear tab clamp over the end of the Swing Arm where indicated. PIC 3 Using the #10–32 B.S.C.S. and #10 Wave Washers, fasten the Phantom covers to the mounting brackets. Tighten the 1/4" hex fastener at the rear of the cover to tighten the tab clamps.
- **STEP 7** Re-install any accessories removed in STEP 2.



It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

Ride On!

# **PHANTOM AXLE COVERS**

INSTALLATION

PAGE