



KNOCK-OFF CENTER CAPS for FLHTCUTG/FLHXXX

CUSTOMER SERVICE 877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kurvakvn.com or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kürvakvn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - •The product must be properly installed, maintained and operated under normal conditions.
 - •Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- •Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breech of contract or duty between Küryakyn and a customer.
- •Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

•Küryakyn electrical products are warranted for

Küryakyn makes no warranty of any kind in regard to other manufacturer1s products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Küryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Küryakyn, P.O. Box 339, Somerset, WI 54025.

Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.

PARTS INCLUDED

Knock-Off Center Cap Assemblies 2

1 Hardware Kit Containing:

#8-32 Phillips Pan Head Screws

6 #8 Flat Washers 6 #8 Lock Washers Center Caps

1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE **INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF** THE IMPORTANT INFORMATION CONTAINED IN THEM.

TOOLS SUGGESTED

Phillips Screwdriver, Cleaning Supplies, Deep Lug Nut Socket

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ianition.

STEP 2

Thoroughly clean both of the rear Trike wheels with soapy water and a clean rag. (For extremely dirty wheels, repeat this and then clean with an ammonia based cleaner such as window cleaner) Rinse and dry completely. Wipe the installation area (PIC 1) with the included alcohol pads to remove any residue.



Ensure the area of installation is free of grease, oil, dirt or other debris including wax/polish products and bugs to ensure proper adhesion. Küryakyn WILL NOT issue a warranty on any parts lost due to improper installation.





|*Küryakyn*

STEP 3 Locate the black Knock-Off Hub Cap base. This is the piece behind the chrome dish with the adhesive tape applied to one side.

Place a deep lug nut socket over one of the lug nuts to act as a guide. PIC 2 Test fit the Base to the rear wheel. The center of the Base will center itself over the raised center portion of the wheel. Make any reference marks with masking tape or a non-permanent marker.



The adhesive will not bond correctly if applied at temperatures less than 50°F. Do not attempt this installation in temperatures less than 50°F.

STEP 4 Remove the Base leaving the deep socket in place. Rub the backing of the adhesive with the back of your fingernail to activate the adhesive. Remove the backing of all four tape pieces.

STEP 5 Carefully slide the Base over the deep lug nut socket and attach it to the wheel. Press in place for one minute. Full bonding will occur in 24 hours. Remove the deep lug nut socket.

STEP 6 Place the chrome Dish over the black Base. The cut-out in the Dish will fit over the screw boss on the Base. PIC 3

STEP 7 Attach the Spinner to the Base using three of the included #8-32 Phillips pan head screws, #8 lock washers and #8 flat washers. PIC 4 Tighten securely.

NOTICE


It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

STEP 8 Snap one of the included Center Caps over the Phillips screws.

NOTE: There are three notches (PIC 5) in the Center Cap. Use a small flat blade screwdriver in one of these notches to pry out the Center Cap should you need to disassemble the Knock-Off Hub Cap to service the rear wheel.

STEP 9 Repeat Steps 3-8 for the other wheel.

NOTE: If the motorcycle is to be operated before the 24 hour cure time has expired, use a good quality masking or painter's tape over the Knock-Off Hub Caps to assist in holding them in place until the cure time is over.

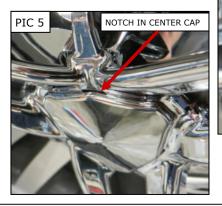









PAGE

2

Ride On!

KNOCK-OFF HUB CAPS

INSTALLATION