



## BLACK WINDSHIELD TRIM 1318

### PARTS INCLUDED

- 1 Windshield Trim—Black— with Rubber Gasket
- 3 1/4"-20 X 5/8" Button Socket Cap Screws
- 3 1/4"-20 x 7/8" Button Socket Cap Screw
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

### THANK YOU FOR CHOOSING KÜRYAKYN!

**IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.**

**NOTICE** This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

**NOTICE** IF INSTALLING THIS PRODUCT FOR ANOTHER PARTY, PLEASE MAKE SURE THEY RECEIVE THIS COPY OF THE INSTALLATION INSTRUCTIONS SO THEY ARE AWARE OF THE IMPORTANT INFORMATION CONTAINED IN THEM.

### TOOLS SUGGESTED

Set of Torx Wrenches, Set of Hex Wrenches


**STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.**

**STEP 1** Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

**NOTE:** Pictures shown are of Chrome parts. Installation of Black parts will be the same.

**NOTE:** If installing windshield trim on Kuryakyn Airmaster fairing , use the 1/4"-20 x 7/8" Button Socket Cap Screws.

**STEP 2** Remove the three Torx head screws that secure the windshield shown in PIC 1. Set these aside, they will not be used again.

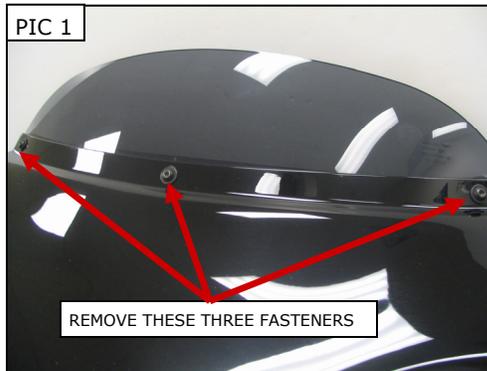

### CUSTOMER SERVICE

877.370.3604 (toll free)

### INSTALLATION QUESTIONS

techsupport@kuryakyn.com  
or call 715.247.2983

### LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
  - The product must be properly installed, maintained and operated under normal conditions.
  - Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
  - Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.

• Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

### ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025. Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders.

©2005 Kuryakyn USA® All Rights reserved.



**STEP 3** Place the included rubber gasket onto the back of the Black Trim. The tall raised lip on the gasket goes on the top of the Black Trim and faces the windshield. PIC 2


**STEP 4** Holding the rubber gasket and Black Trim together, place it on the outer fairing lining up the holes in the trim with the holes in the in the outer fairing and windshield. Loosely install a 1/4"- 20 x 5/8" button head cap screw in the center hole. PIC 3

**NOTE: If installing windshield trim on Küryakyn Airmaster fairing, use a 1/4"-20 x 7/8" button socket cap screw in the center hole .**

**STEP 5** Loosely install a 1/4"- 20 x 5/8" button head cap screw in each outside hole. PIC 4

**NOTE: If installing windshield trim on Küryakyn Airmaster fairing, use the 1/4"-20 x 7/8" button socket cap screws in the outside holes.**

**STEP 6** Making sure the short lip of the rubber gasket is just above the top of the Chrome Trim, PIC 4, tighten the center fastener first (**when tightening the fasteners, make sure the head of the fastener is centered in the recess of the Trim. You may need to push down on the Trim slightly to center the fasteners.**), then the outside fasteners, being careful not to over tighten them, which may damage the trim, windshield or fairing.

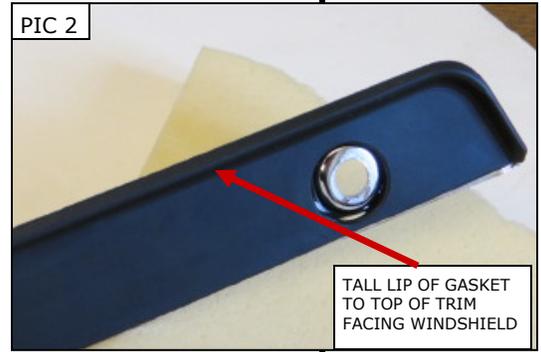

**NOTICE** It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.