

INSTRUCTION SHEET



2014+ SADDLEBAG HINGE INSERTS

INCLUDED IN BOX:
(1) Pair Hinge Inserts
Instruction Sheet

NOTE:
Removal of saddlebag lid from saddlebag is not necessary for installation.


QUESTIONS?
 **EMAIL:**
info@getklocked.com
 **CALL:** (605) 996.3700



1. Carefully release the bond and start removal of stock reflector.



4. Remove backing from the Saddlebag Hinge Insert.

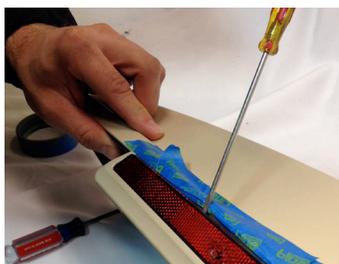

2. Gently lift reflector off stock saddlebag latch once adhesive bond is released.



5. Carefully position Saddlebag Hinge Insert in place, press to adhere.



3. Carefully remove all remaining adhesive.

Klock Werks cannot be held responsible for any damage to painted surfaces during removal of stock reflector. Use of a heat source may aid in removal of stock reflector adhesive. Use caution when working with painted surfaces.